


Audio Delay Help

Copyright Fountain Computer Products 2010

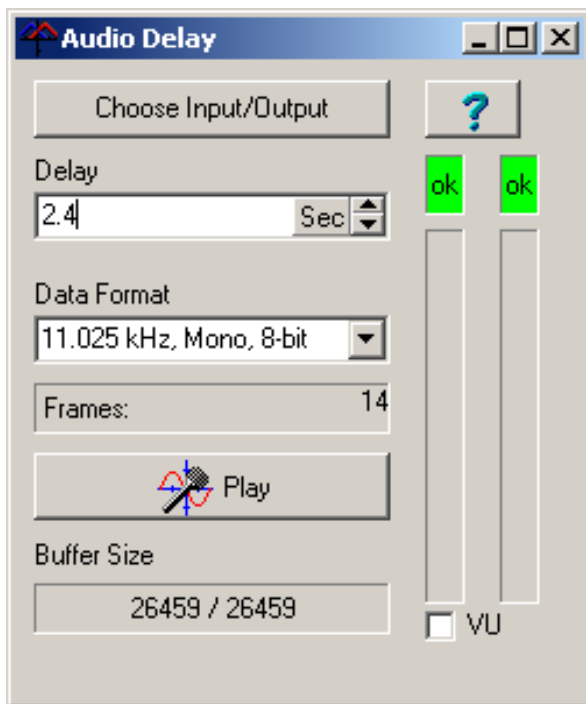

Audio Delay Help

Copyright Fountain Computer Products 2010

All rights reserved. No parts of this work may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Printed: August 2010

Table of Contents

	Foreword	0
	Part I Introduction	5
1	System Requirements.....	5
2	Connecting An Input.....	5
3	Configure Your Computer	6
	XP Configuration	6
	Configure Inputs XP.....	7
	Configure Output XP.....	10
	Vista/Window-7 Configuration	13
	Configure Inputs Vista/Win7	13
	Configure Outputs Vista/Win7	17
	Sound Card Configuration	21
4	Configure Audio Delay.....	24
	Index	0

Part



1 Introduction

Audio Delay is program that can delay audio being played on your computer for a certain period of time. This is useful in situation where you want to synchronize audio with another media source. For example, people often like to listen to local radio play-by-play broadcasts of a sporting event while watching the video on TV. This used to be easy because the radio and TV were broadcast without any sort of delay. However, now with satellite feeds and digital broadcasts, the video may be delayed by as much as 10 to 15 seconds.

Radio is seldom delayed, so you hear the result of the play long before you see it, which is very distracting and ruins the enjoyment of the game.

The Audio Delay program allows you to feed your radio's audio through your computer and introduce a variable delay of from 0.1 seconds to several minutes. This makes it easy synchronize the radio audio and the Television video.

1.1 System Requirements

The Audio Delay program will work on any PC with modern sound card that has a Line Input for recording. The program also requires Windows XP, Vista or Windows 7. It may work on earlier version of Windows, but it has not best tested on this operating systems.

1.2 Connecting An Input

The first step to using the Audio Delay is to connect device to the input of your computer. Typically this will be a radio. The radio must have an ear phone jack like the one shown to the right.



You will also need an adapter that will convert from the ear phone jack that plugs into the radio to the jacks that connect to the sound card on the back of your computer. Most sound cards will have will have RCA jacks, but there may be some variation, so check you computer before you buy the adapter.

Like wise, if the radio has a mono-head phone jack, you will need to get a mono adaptor; if it is stereo, you will need a stereo adaptor like the one shown to the right.



Most modern sound card can be configured so the jack on the back perform different functions. The sound cards normally come with a utility that allows you to configure the sound card. You need to configure the sound card so it has a "Line-In" input. The image below show the typical configuration utility for the RealTech sound card.




1.3 Configure Your Computer

You now need to configure your computer so it is getting sound from the radio and outputting the sound from the "Wave" device. Most of the configuration can be done directly for Audio Delay.

Press the "Choose Input/Output" in the Audio Delay program. This will take you to Audio Setup dialogs for Windows. The process is a little different for Windows XP, Vista and Windows-7. Here are detailed instructions for each operating system:

1. Windows XP.
2. Vista/Window-7

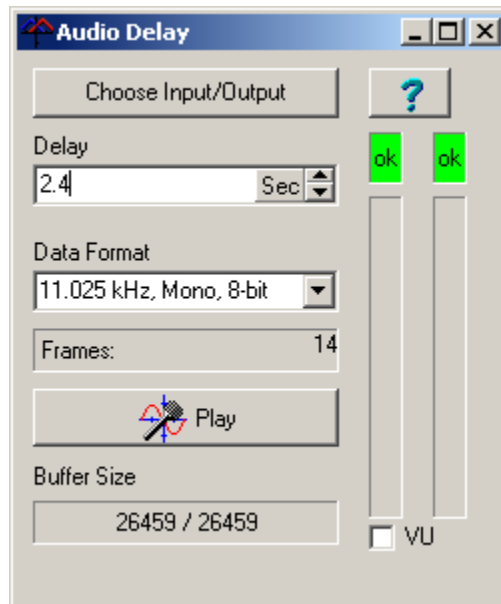

In some instances, you may also need to configure advanced option that are only accessible from Sound Card Utilities.

1.3.1 XP Configuration


You will need to configure both input and the output channels of your sound card. Here are detailed instructions for doing both:

Configuring Inputs Under XP.
Configuring Outputs Under XP.


1.3.1.1 Configure Inputs XP

Setting Up Inputs. The following section gives detailed instructions for setting up inputs for Windows XP inputs:

1. Press the "Choose Input/Output" button in the Audio Delay program.

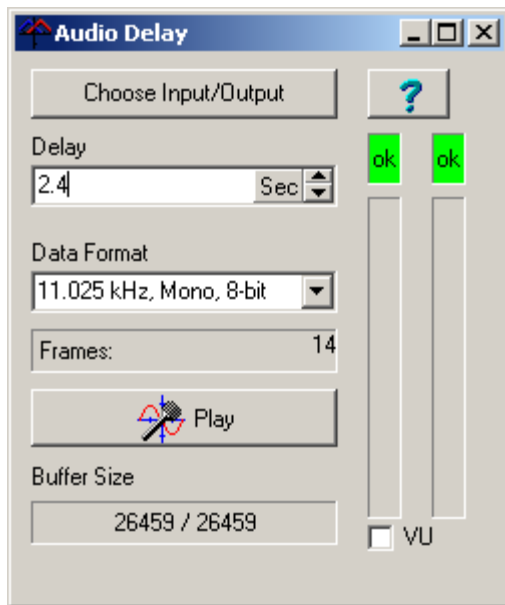


2. This will take you to the "Sounds and Audio Devices Properties" dialog. Choose the "Audio" page from the tabs along the top.

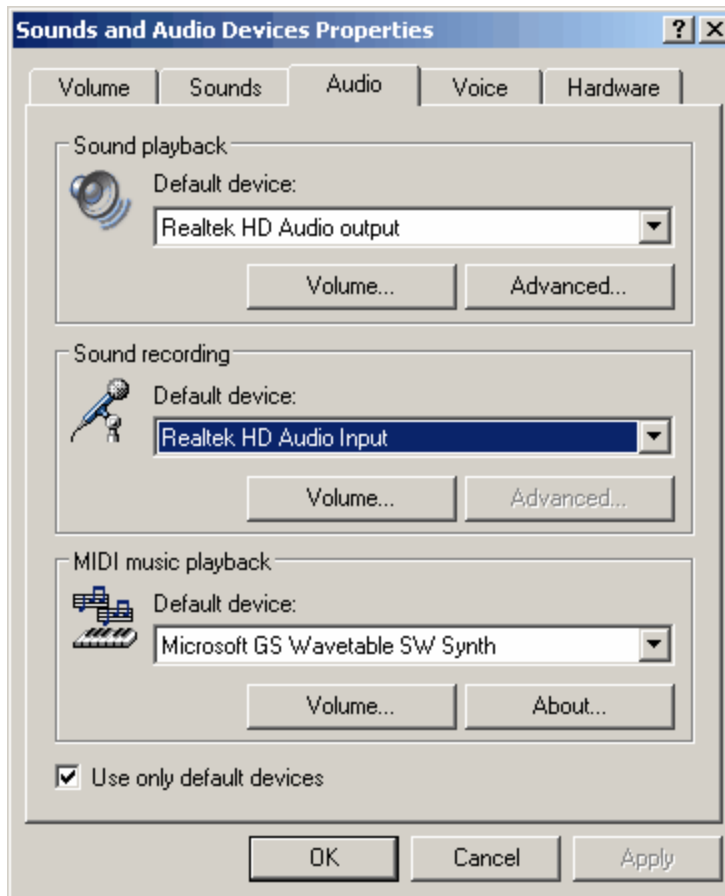


3. In "Sound Recording" section, choose a default device from the list. This will normally be your sound card. In some instances, like the example above, it doesn't describe the option as a sound card so you may have to refer to your computer documentation to know which device is your sound card.

4. Next press the "Volume" button in the Sound Recording section. This will take you to the "Recording Control."

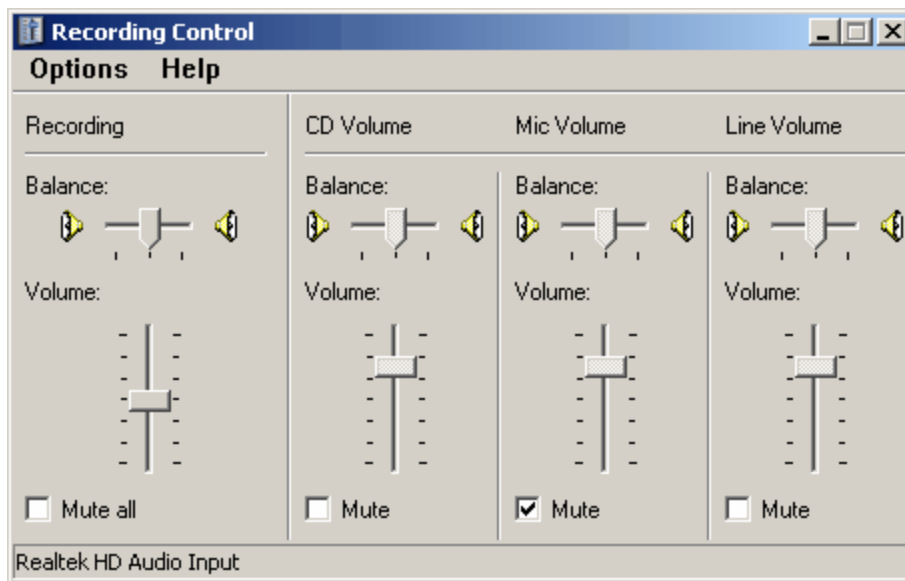

Look at the "Line Volume" option. This option controls the input volume from your radio. Make sure it is not muted and the volume is up at least about half way. You can adjust the volume later if it is too high or low.

If you are missing the line volume option, select the "Options -> Properties" item from the menu bar. This will bring up the Properties window.

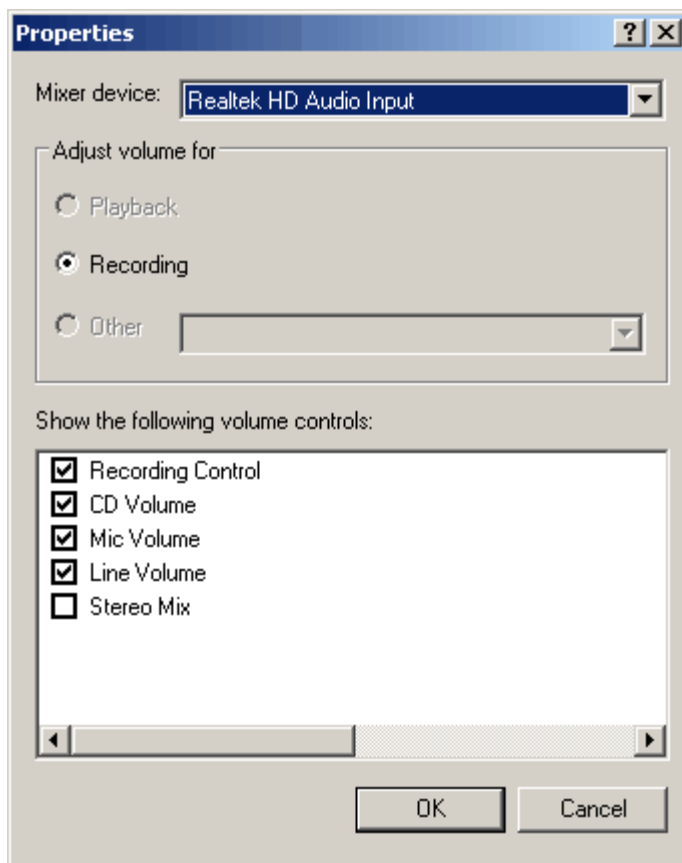


Make sure the Line Volume option is checked and press OK. If you still don't have access to the controls you need, you may have to set things up in the Sound Card Configuration utility that came with your sound card. Click [here](#) for general information about Sound Card Configuration Utilities. Also, make sure your hardware inputs and outputs are correctly configured.


1.3.1.2 Configure Output XP

Setting Up Output. The following section gives detailed instructions for setting up an output for Windows XP outputs:

1. Press the "Choose Input/Output" button in the Audio Delay program.

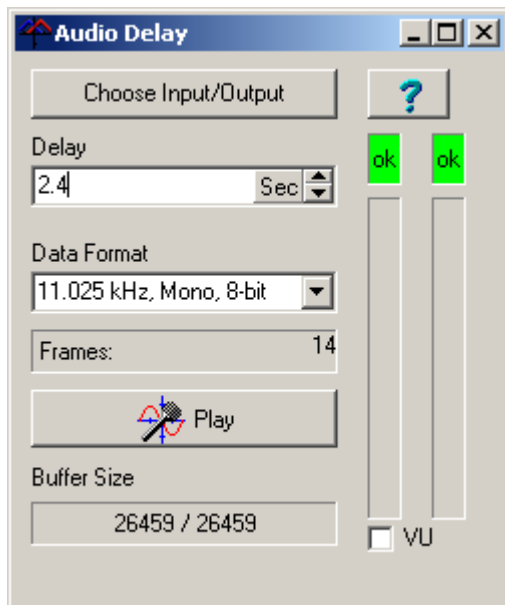


2. This will take you to the "Sounds and Audio Devices Properties" dialog. Choose the "Audio" page from the tabs along the top.

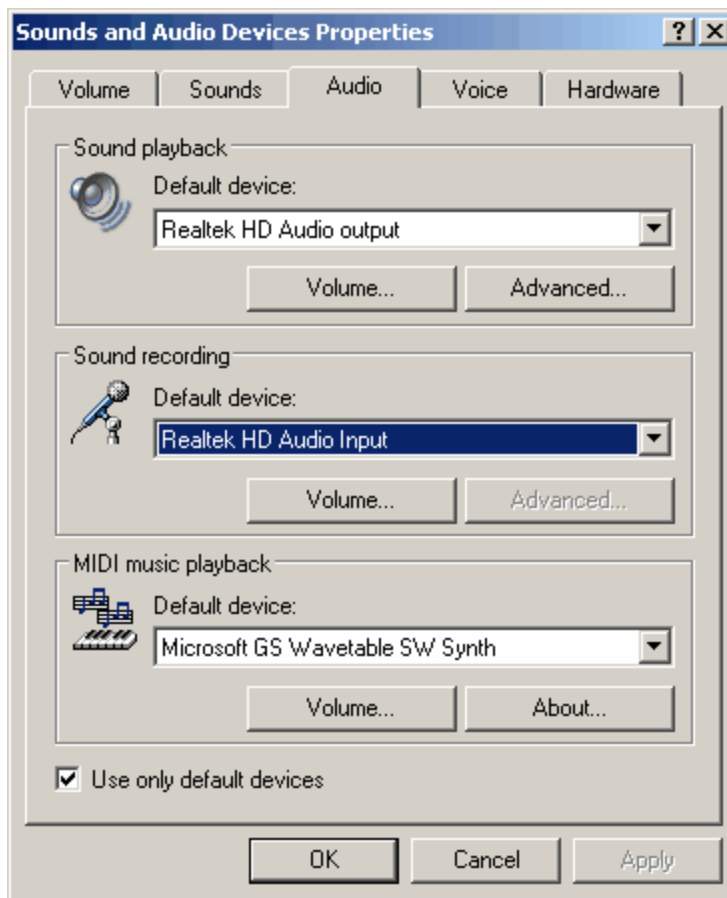

3. In "Sound Playback" section, choose a default device from the list. This will normally be your sound card. In some instances, like the example above, it doesn't describe the option as a sound card so you may have to refer to your computer documentation to know which device is your sound card.

4. Next press the "Volume" button in the Sound Recording section. This will take you to the "Master Volume Control."

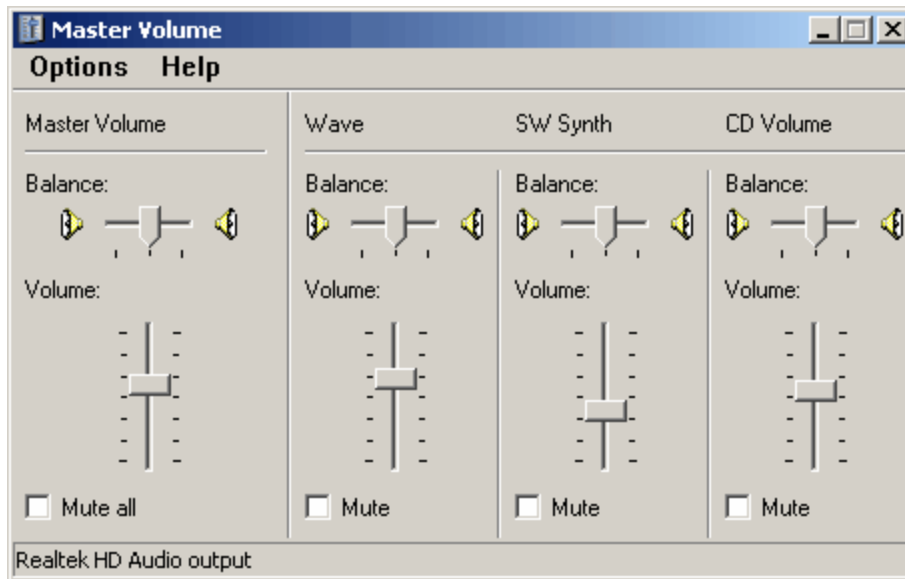


The delayed audio will be played back through "Wave" device, so make sure it is not muted and the volume is at least half way up.

The Master volume should also be un-muted and the volume should be about half way up. You will probably need to adjust this value later as get everything adjusted.

Some sound cards will allow the Line Input to monitored directly and there will be a Line Volume control. If the Line Volume is enabled, this will produce an echo sound as both the delayed and undelayed audio will be played at the same time. If you have this option, make sure it is muted.

5. If the Wave or Master Volume Control sections is missing, select the "Options -> Properties" item from the menu bar. This will bring up the Properties window.

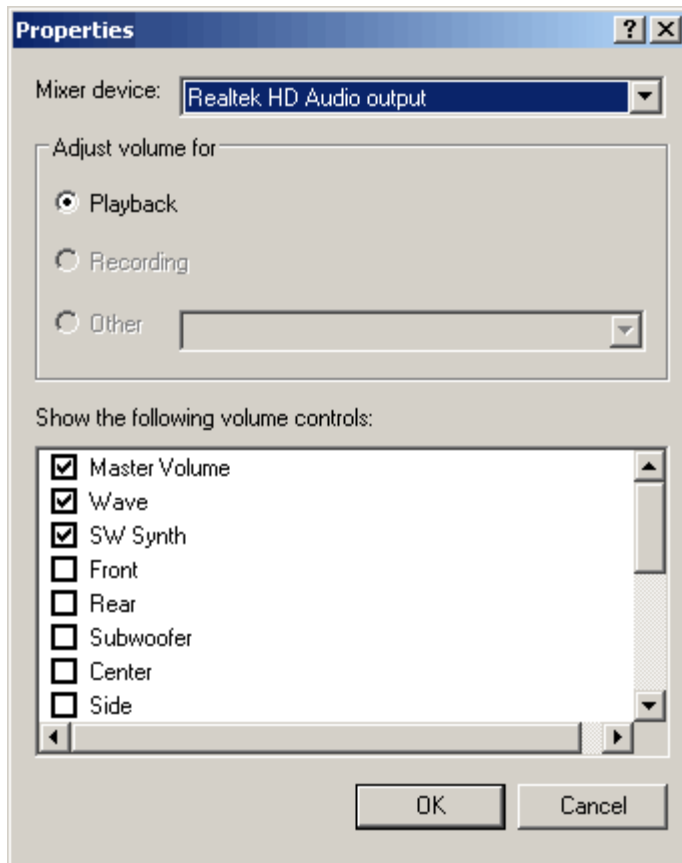

Make sure the Master Volume and Wave options are enabled and press OK. If you still don't have access to the controls you need, you may have to set things up in the Sound Card Configuration utility that came with your sound card. [Click here for general information about Sound Card Configuration Utilities.](#) Also, make sure your hardware inputs and outputs are correctly configured.

1.3.2 Vista/Window-7 Configuration


You will need to configure both input and the output channels of your sound card. Here are detailed instructions for doing both:

Configuring Inputs Under Vista/Win7.
 Configuring Outputs Under Vista/Win7.


1.3.2.1 Configure Inputs Vista/Win7

Setting Up Inputs. The following section gives detailed instructions for setting up inputs for Vista or Windows-7 inputs:

1. Press the "Choose Input/Output" button in the Audio Delay program.

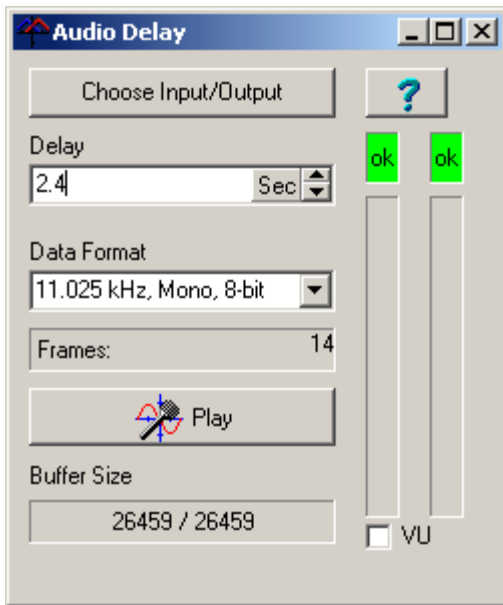


2. This will take you to the "Sound" dialog. Select the "Recording" tab at the top of the window.

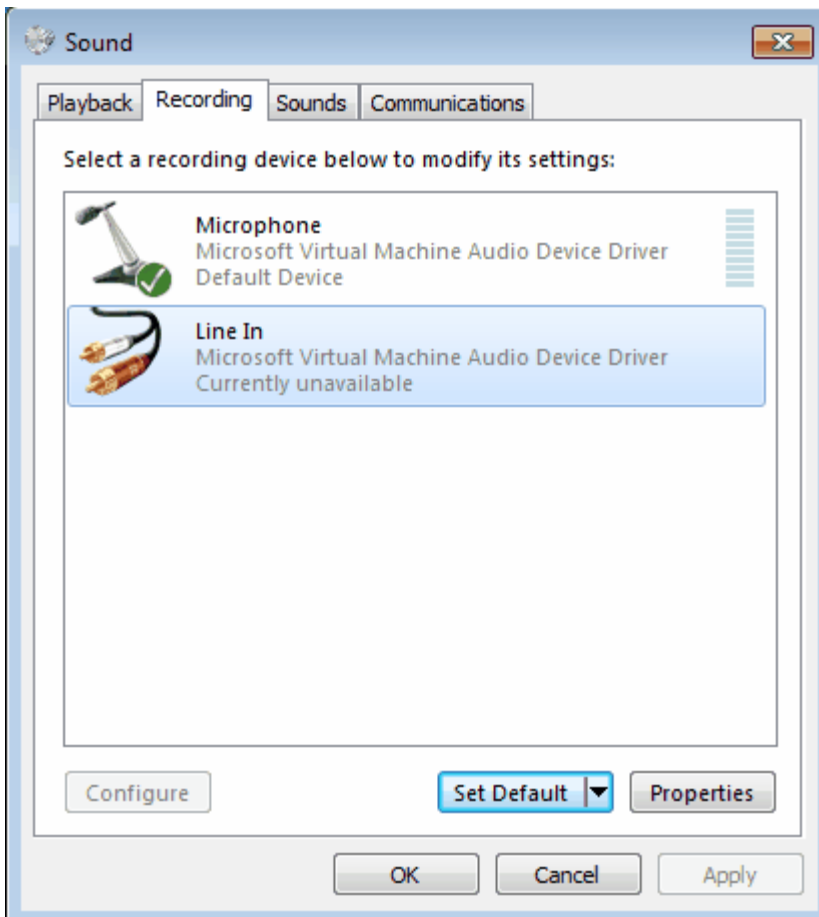

Select the "Line In" option. Next, press the "Default" button. This will cause a check mark to appear


indicating that the option has been selected.

3. Press the "Properties" button. This will display the "Line In Properties" dialog. Select the "General" page.

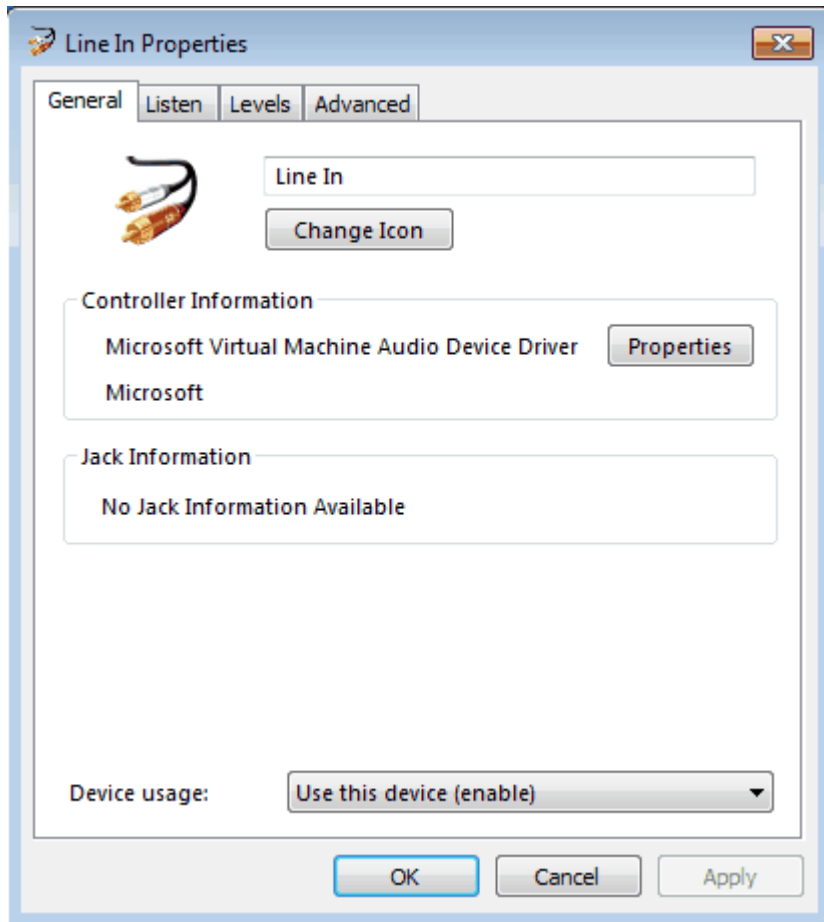


Make sure the "Device Usage" option at the bottom of the page is set for "Use this device (enable)."

4. Now choose the "Listen" page.

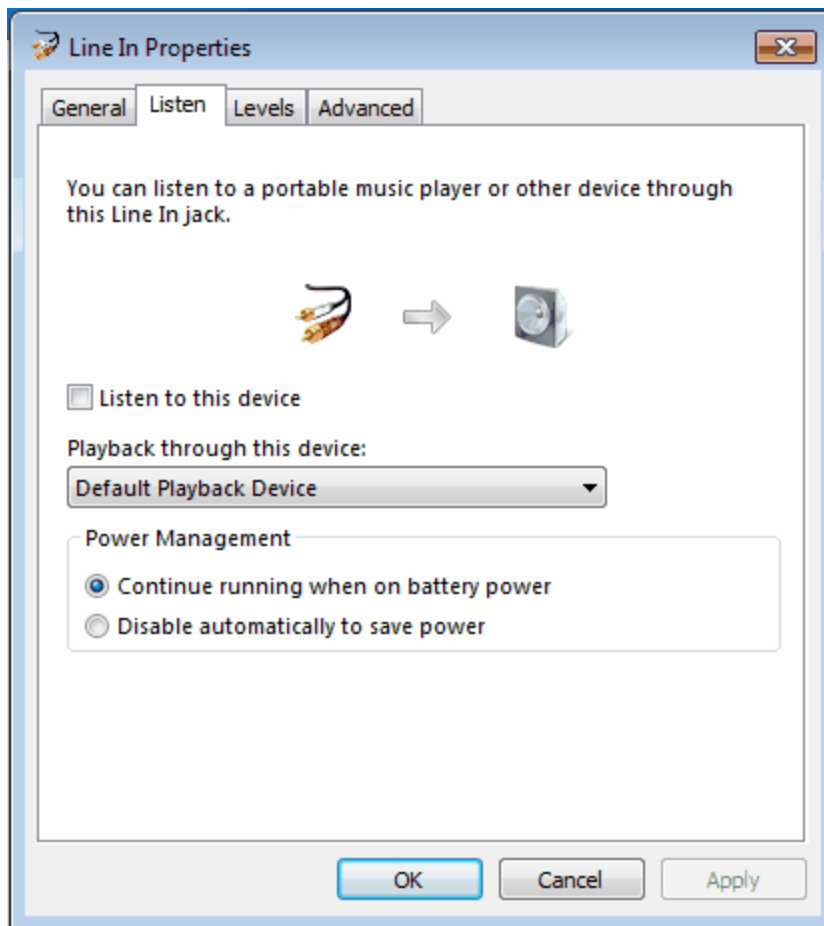

Make sure the "Listen to this device" option is not enabled, otherwise there will be an echo in the playback.

5. Switch to the Levels page.

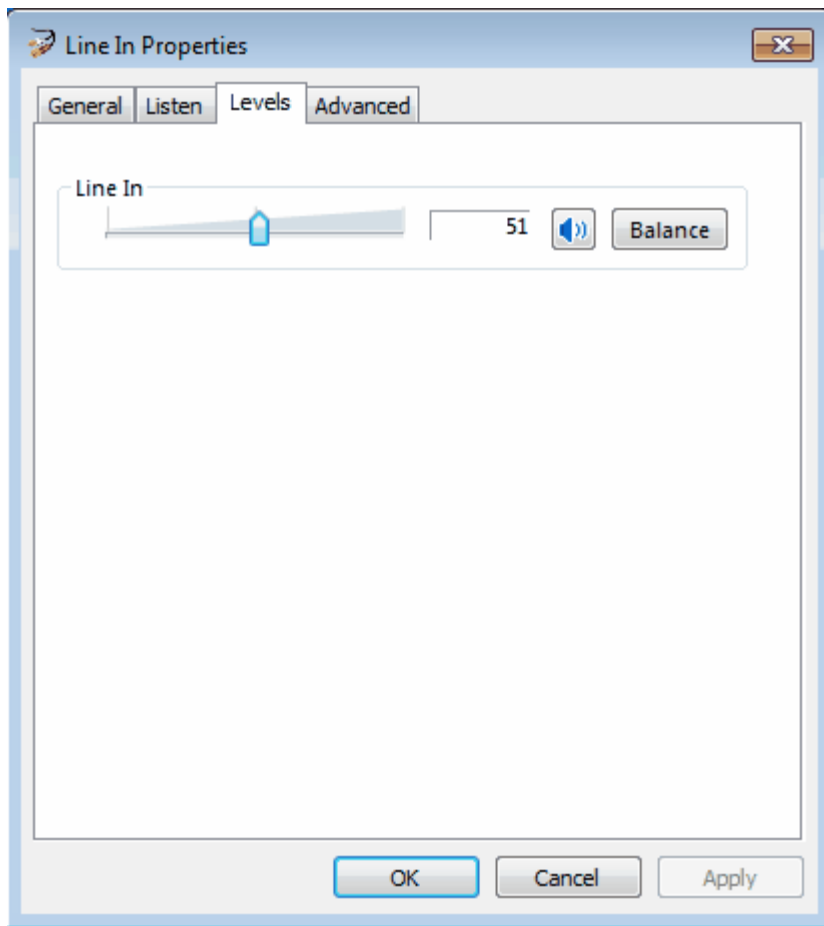


Adjust the levels to about 50%. If necessary, you can return to this dialog and adjust them later.

When you have completed all the steps, press OK twice to exit back to the Audio Delay program.


1.3.2.2 Configure Outputs Vista/Win7

Setting Up Output. The following section gives detailed instructions for setting up an output for Windows outputs:

1. Press the "Choose Input/Output" button in the Audio Delay program.

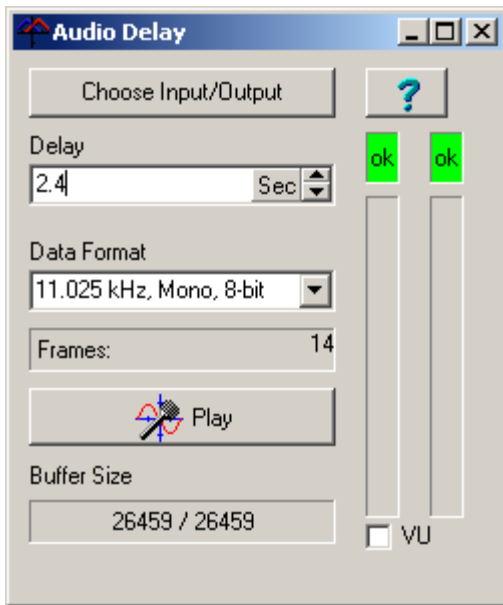


2. This will take you to the "Sound" dialog. Choose the "Playback" page from the tabs along the top.

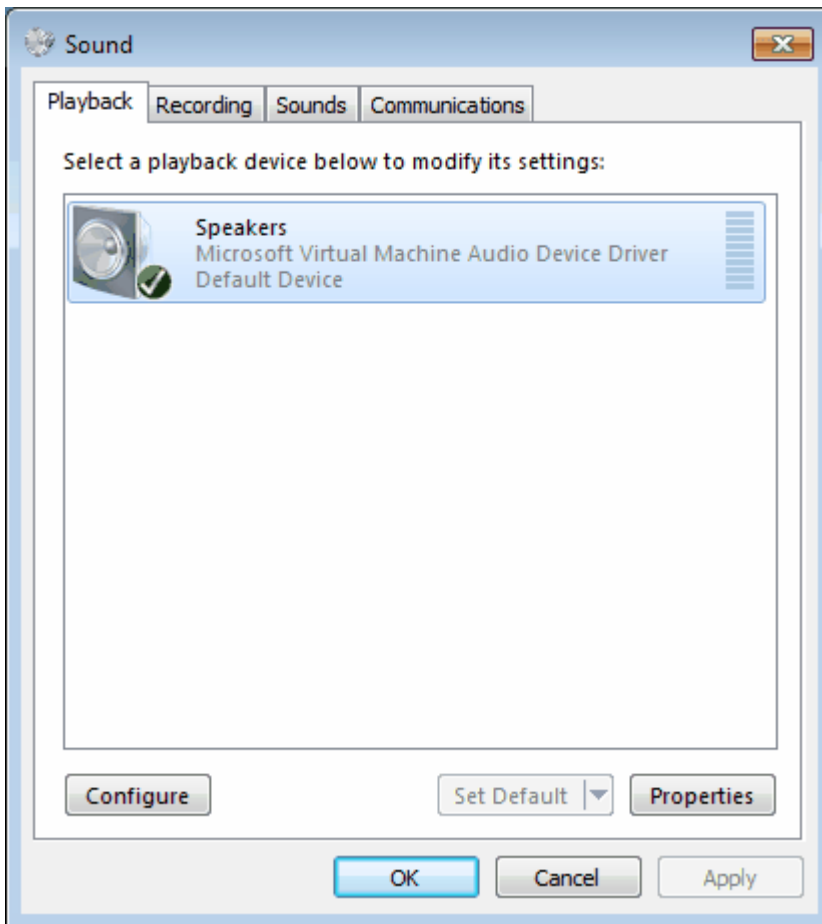

Make sure the Speakers options is selected and press the "Set Default" button. This will place a


green check mark next to the speaker icon.

3. Press the Properties Button. This will bring up the Speakers Properties dialog. Select the "General Tab."

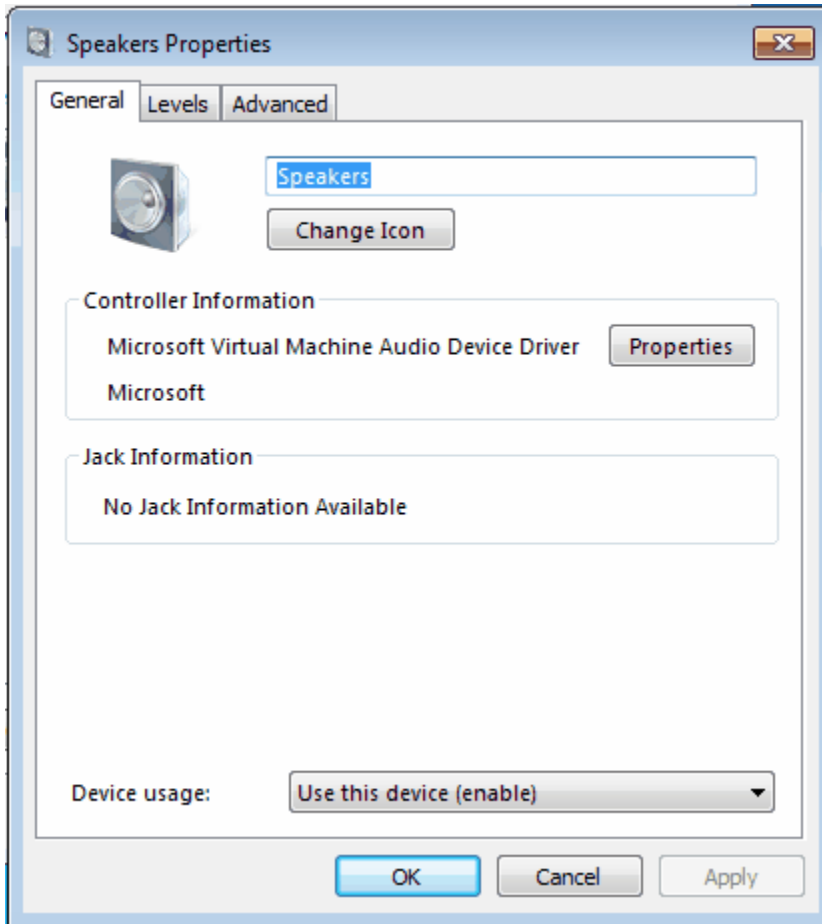

Make sure the "Device Usage" option at the bottom of the page is set for "Use this device (enable)."

4. Select the "Levels" tab at the top of page.

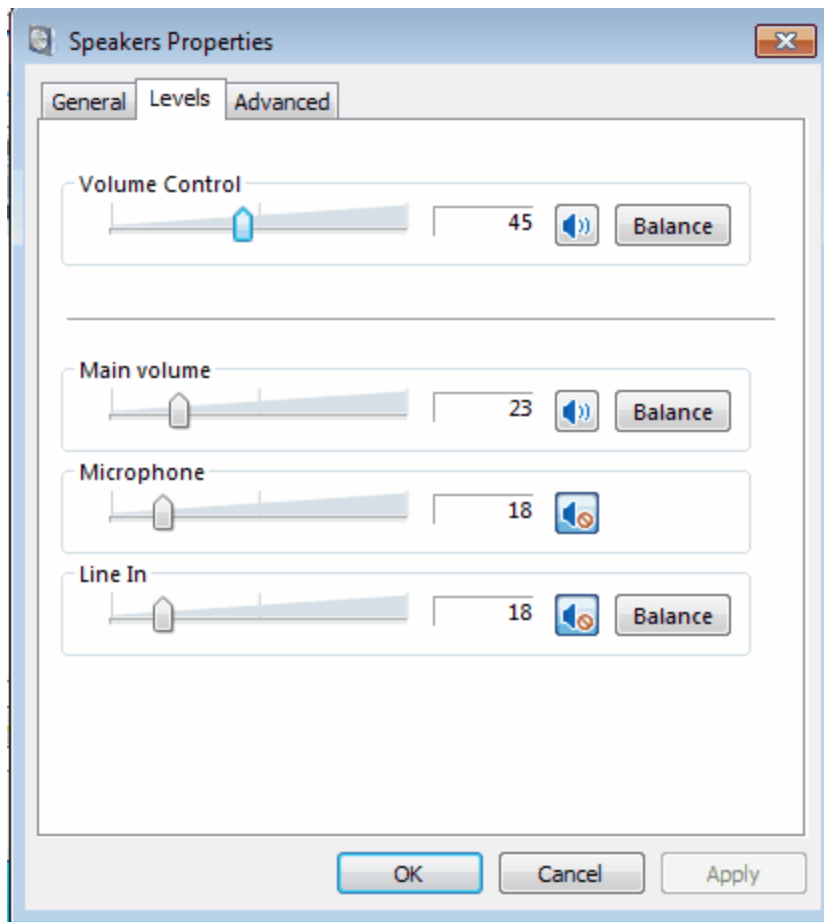


Make sure Volume Control and the Main Volume controls are about 50%. Make sure the Line In input is muted, otherwise it may cause an echo. When you have completed all the steps, press OK twice to exit back to the Audio Delay program.

5. We will now adjust the playback and speaker volume for the Audio Delay. This should be done after you configure the Audio Delay and have pressed the Play Button.

Click on the "Speaker" icon in the Task bar. This will display the Windows Volume control.

Double on the "Mixer" text at the bottom of the volume control. This will bring up the Volume Mixer for the Speakers.

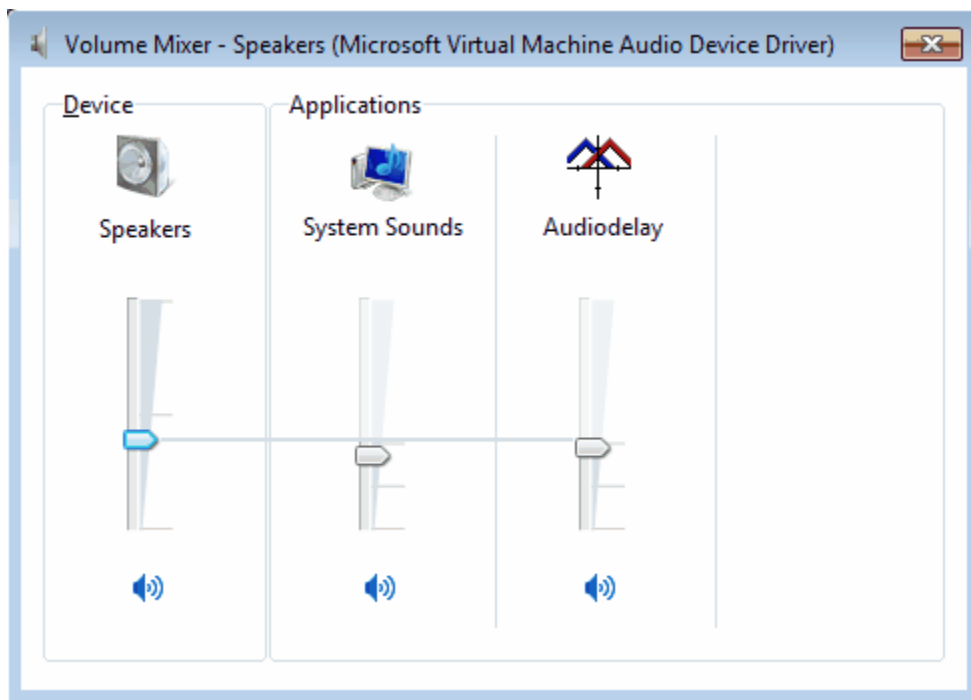

Adjust the Audio Delay and Speaker volume to get a comfortable listening level. On some computers, you may need to turn up the system sound level as well as the Audio Delay volume.

1.3.3 Sound Card Configuration


These days, most computers have sophisticated sound cards that come with built-in utilities to configure the advanced features of the cards. In some instances, you may need to directly configure

the sound card through one of these utilities to get everything setup the way you want.


The RealTek Audio controller is one of the most common sound cards built into mother boards. For this reason, we'll walk through the configuration process with their configuration utility. Other sound controllers will have similar utilities.

1. Running the Utility. Most sound configuration utilities are displayed in the System Tray, so just double click on the appropriate icon to start the program.


2. Setup Recording. Go to the Mixer Page and check the Line Volume control to be sure it is not muted.

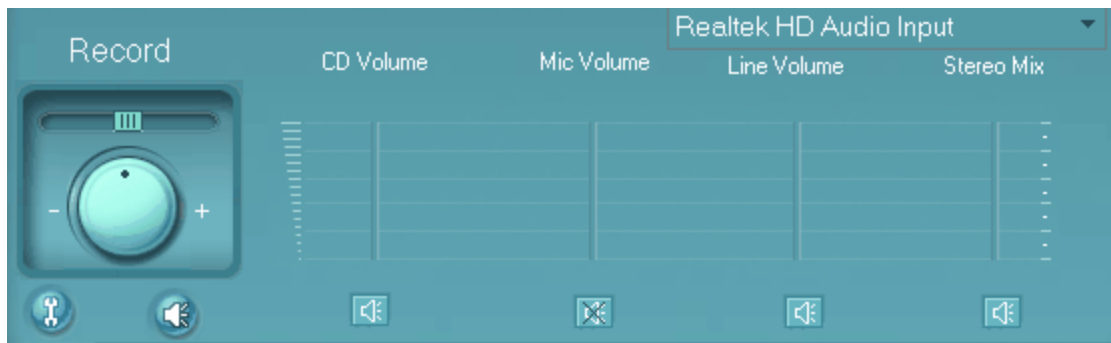


If there is a volume slider, make sure the volume is at least set about half way. If you don't see a line volume option, press the little "Tool" button in that is shown in the lower left corner of the image above. Make sure the Line Volume is enabled.

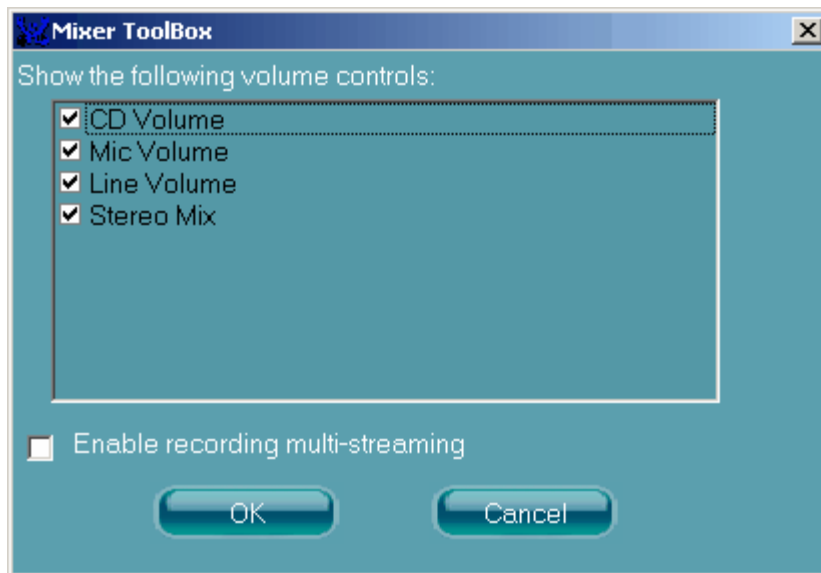


2. Setup Play Back. In Playback section, make sure the Wave option is enabled and the volume control is at least halfway up.

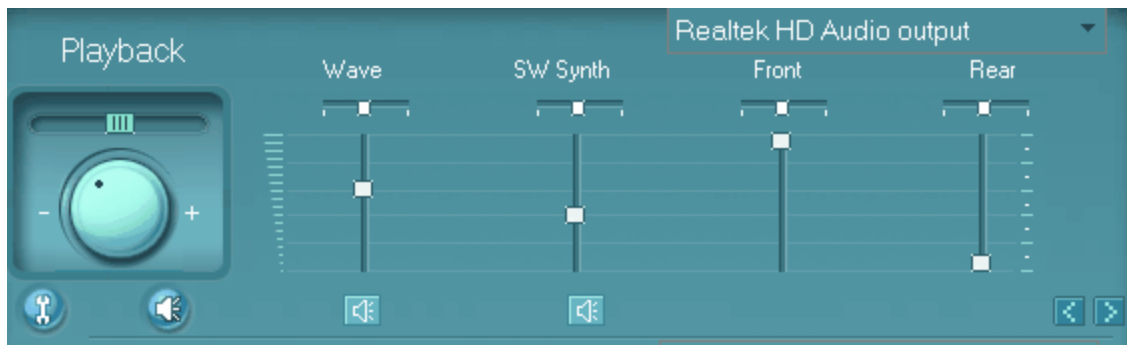

You also need to make sure the Line Input isn't being feed directly to the output. This will cause an echo because you will hear both the delayed and undelayed sound. RealTek software doesn't identify the Line Input as "Line Input," it identifies it by the color of the plug on the rear of the computer. When we setup the rear plugs, the "Line Input" was on the Blue Plug. So scroll the display to the right using the arrow button (in the lower right-hand corner above,) until you get to the "Rear Blue In" option. Make sure it is mute or the volume is all the way down.

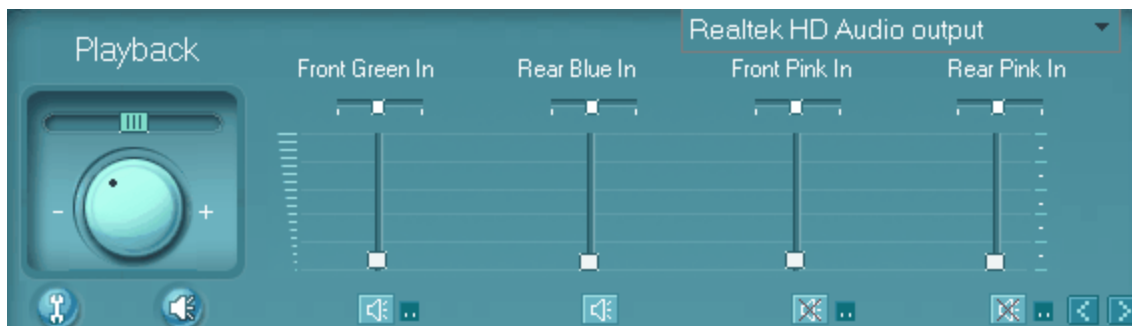

If you cannot find the "Rear Blue In," option, click on the little "tool" button, (in the lower left corner of the image above,) and see if the option is available. If it is, enable it and then mute or turn down the volume.

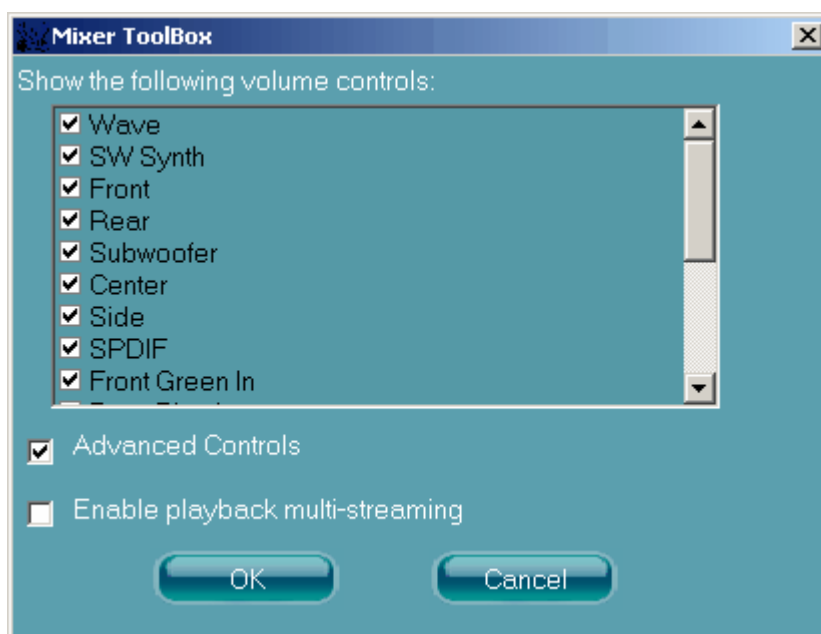

1.4 Configure Audio Delay

1. **Data Format.** Begin choosing a data format.

a. **Sample Rate.** Sample Rate controls the frequency response of the audio delay. The higher the sample rate, the higher the frequency of the audio delay. Generally you will have choice of at least 3 sample rates:

11.025 kHz - AM Radio Quality

22.05 kHz - FM Radio Quality

44.1 kHz - CD Quality

If you are connected to an AM radio, you should use the 11.025 kHz setting. Using a higher setting will accent the noise and static found on AM radio. Likewise, you may want to use 22.05 kHz for FM radio, although you still may end up accenting high frequency noise. The 44.1 kHz sample rate is almost never used for radio applications

b. **Mono/Stereo.** If you are using AM radio you will always use the mono option. If you are using FM radio and have the proper jacks, you can use a stereo option.

c. **8-Bit/16-Bit.** This option controls the dynamic range of the audio. Dynamic Range is the range of loudness between the softest and loudest sounds. In almost all applications, 16-bit is the preferred option since it produces more realistic and natural sound.


2. **Adjust Volume.** Make sure all your cables are plugged in and the delay is set to 0.1 seconds. Turn on your radio and press the "Play" button. Turn up the volume on the radio until you hear sound. (If you don't hear sound, check your cables, adaptors and jacks and make sure they are plugged in the Line Input. Also check your computer's configuration making sure the Line Input and the SW output are not muted and their volume controls are turned up at least half way.)

Now check the VU check box in the lower right corner. You should see the audio levels graphically displayed just above the check box. Turn the radio volume up until it almost reaches the top. The box at the top should always be green and never red. If the box turns red even for a fraction of a second, the audio is too high and will be distorted.

3. **Adjust Delay.** Your Television Signal can take many different paths to reach your receiver. For example, it may travel by satellite and each satellite bounce adds about a second of delay. Also, many live events have 5 second delay so that the broadcast crew can catch any obscene language or gestures that might be caught accidentally on camera. Finally, digital TVs introduce their own delays.

Radio is different. It is usually sent directly to the broadcast station and transmitted immediately. That means there is practically no delay in the signal. What the Audio Delay program does is delay the radio sound so it matches the delay of the Television and is synchronized with video stream.

The final task is to adjust the Audio Delay program so the delays exactly match the television. To do

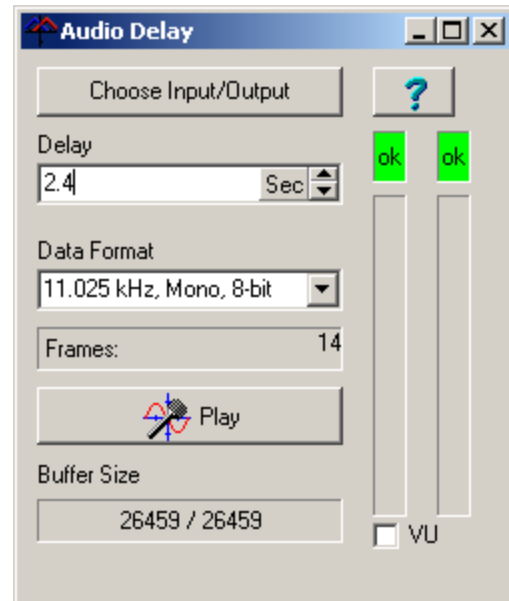

this, press the Play Button again to disable playback. Next, increase the delay to about 2.5 seconds. This is the typical delay for off an air broadcast with no satellite delay. Now re-press the Play Button. There will be a 2.5 second delay before the audio starts playing. Watch the television while listening to the audio. If the audio is a head or behind the video, repeat the steps above, adjust the delay up or down, until the audio is in sync with the video. Remember in some cases the delay may be more than 10 seconds.